



Dell Alienware M11x R3 Hard Drive Replacement

Written By: Richard Maurice






TOOLS:


- [JIS #1](#) (1)
-

Step 1 — Lower Case

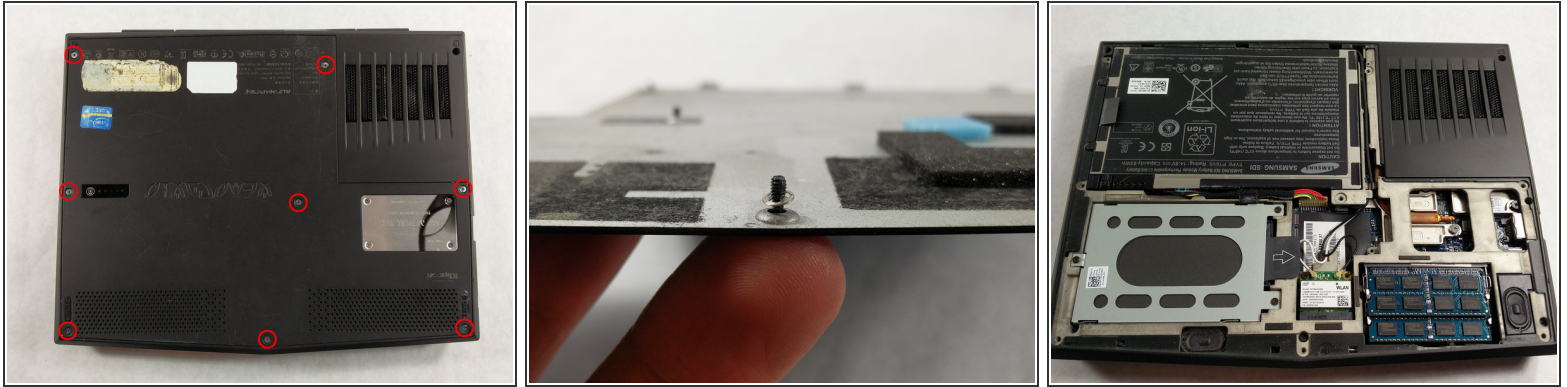

- Loosen the 8 retaining screws on the base of the computer.
- i** The screws have retaining washers to hold them in place, so they won't actually separate from the base plate.
- Remove the bottom cover from the laptop.

Step 2 — Hard Drive

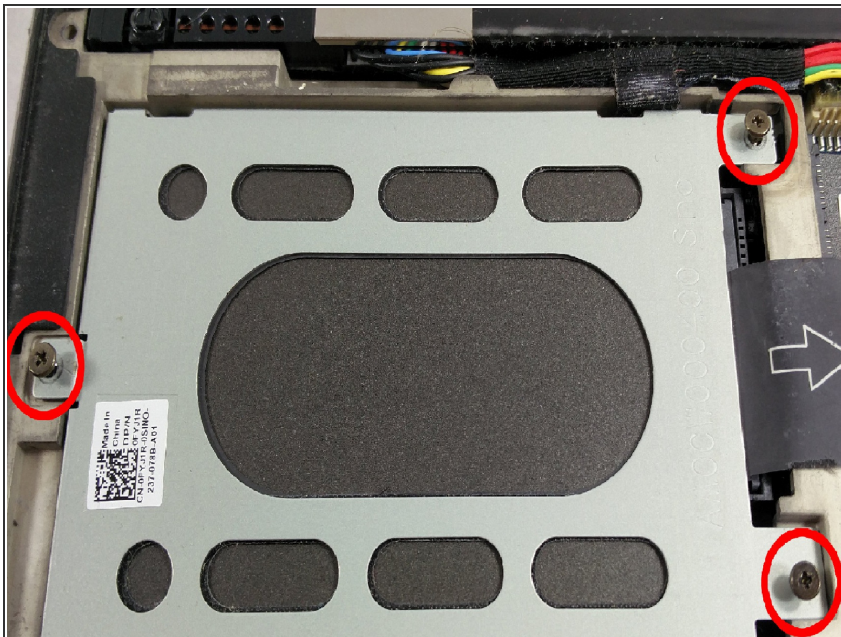


- Unscrew highlighted screws attaching the cage to the laptop.

Step 3



- Grasp the plastic tab provided, and gently pull up. This will unplug the drive from the laptop.

Step 4

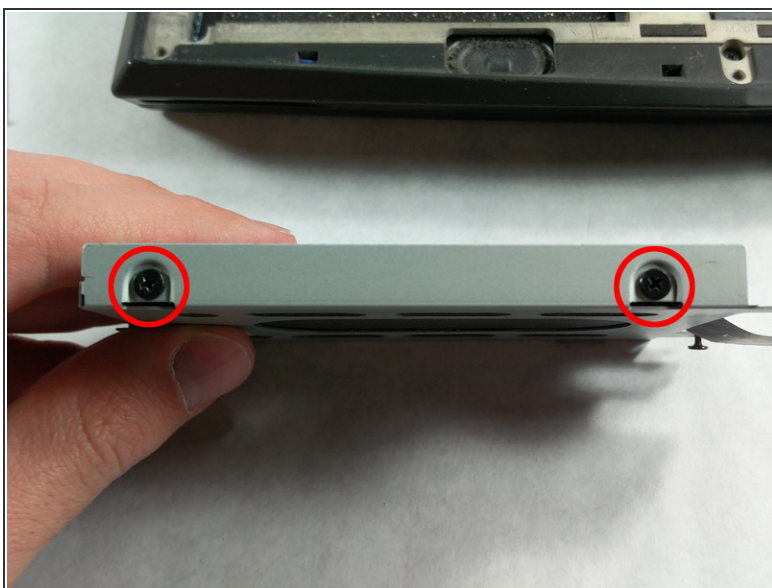

- On both sides of the cage, there are two screws you have to unscrew to be able to remove the SSD.

Step 5



- Finally, remove the L connector for the hard drive. You will need to put this on your new hard drive.
- Now follow these steps in reverse, and then reinstall your operating system, and you're all set!

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 03:04:20 PM.